
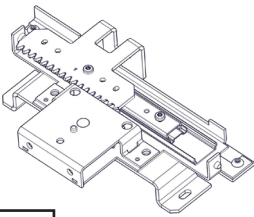
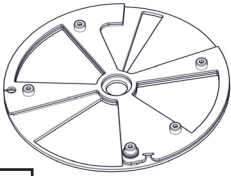
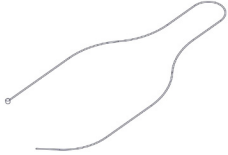
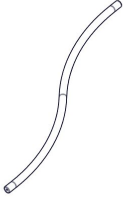


IA-0N29P-160 Air supply control kit

 1x IS-0N29P-030	 1x IS-0N29P-120	 1x 22-80312-700	 2x 22-0N29U-350
 4x 22-60328-600	 1x 22-41613-200	Service Manual  1x 24-0N29U-S02	

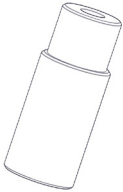