
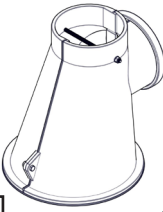
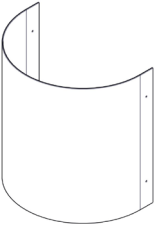
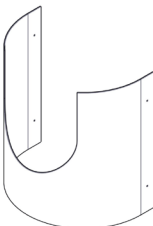
 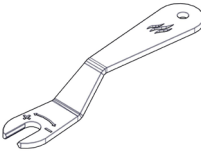

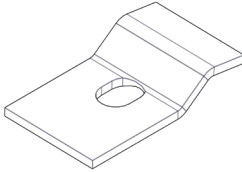
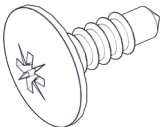
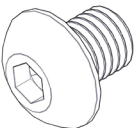
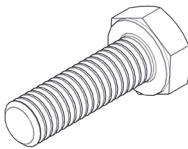
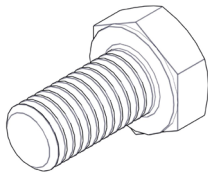


IN-0N36A-001-004, N-36A

 1x IS-00N21-040	 1x 22-00N21-160	 1x 22-00N21-160	 1x IS-0N36A-030 (22-00N20-180)
 1x IS-0N36A-030 (22-0N36A-210)	 4x IS-00N23-090 (IP-00N23-010)	 3x IS-0N36A-030 (22-00N23-210)	No 3  1x IS-0N36A-030 (21-70000-030)
M4,2x13  4x IS-0N36A-030 (21-40009-013 Screw)	M5x6  4x IS-0N36A-030 (21-30001-050)	M6x20  3x IS-0N36A-030 (21-30004-020)	M8x16  4x IS-0N36A-030 (21-30006-016)
Ø8x24  4x IS-0N36A-030 (21-50000-022)	Ø6x18  3x IS-0N36A-030 (21-50001-018)	 1x IS-0N36A-030 (24-00028-000)	User manual  1x IS-0N36A-030 (24-0N36A-100)

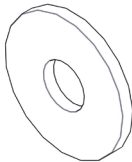