
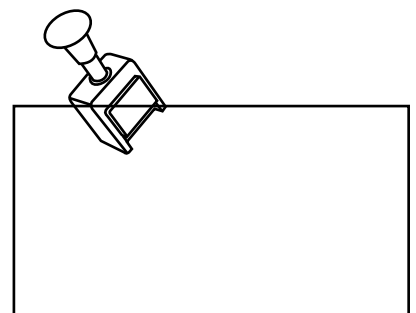
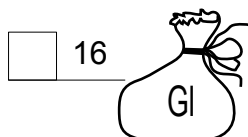
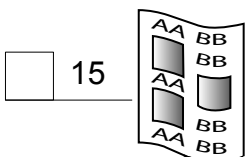



Firenze straight Sweden for D2000

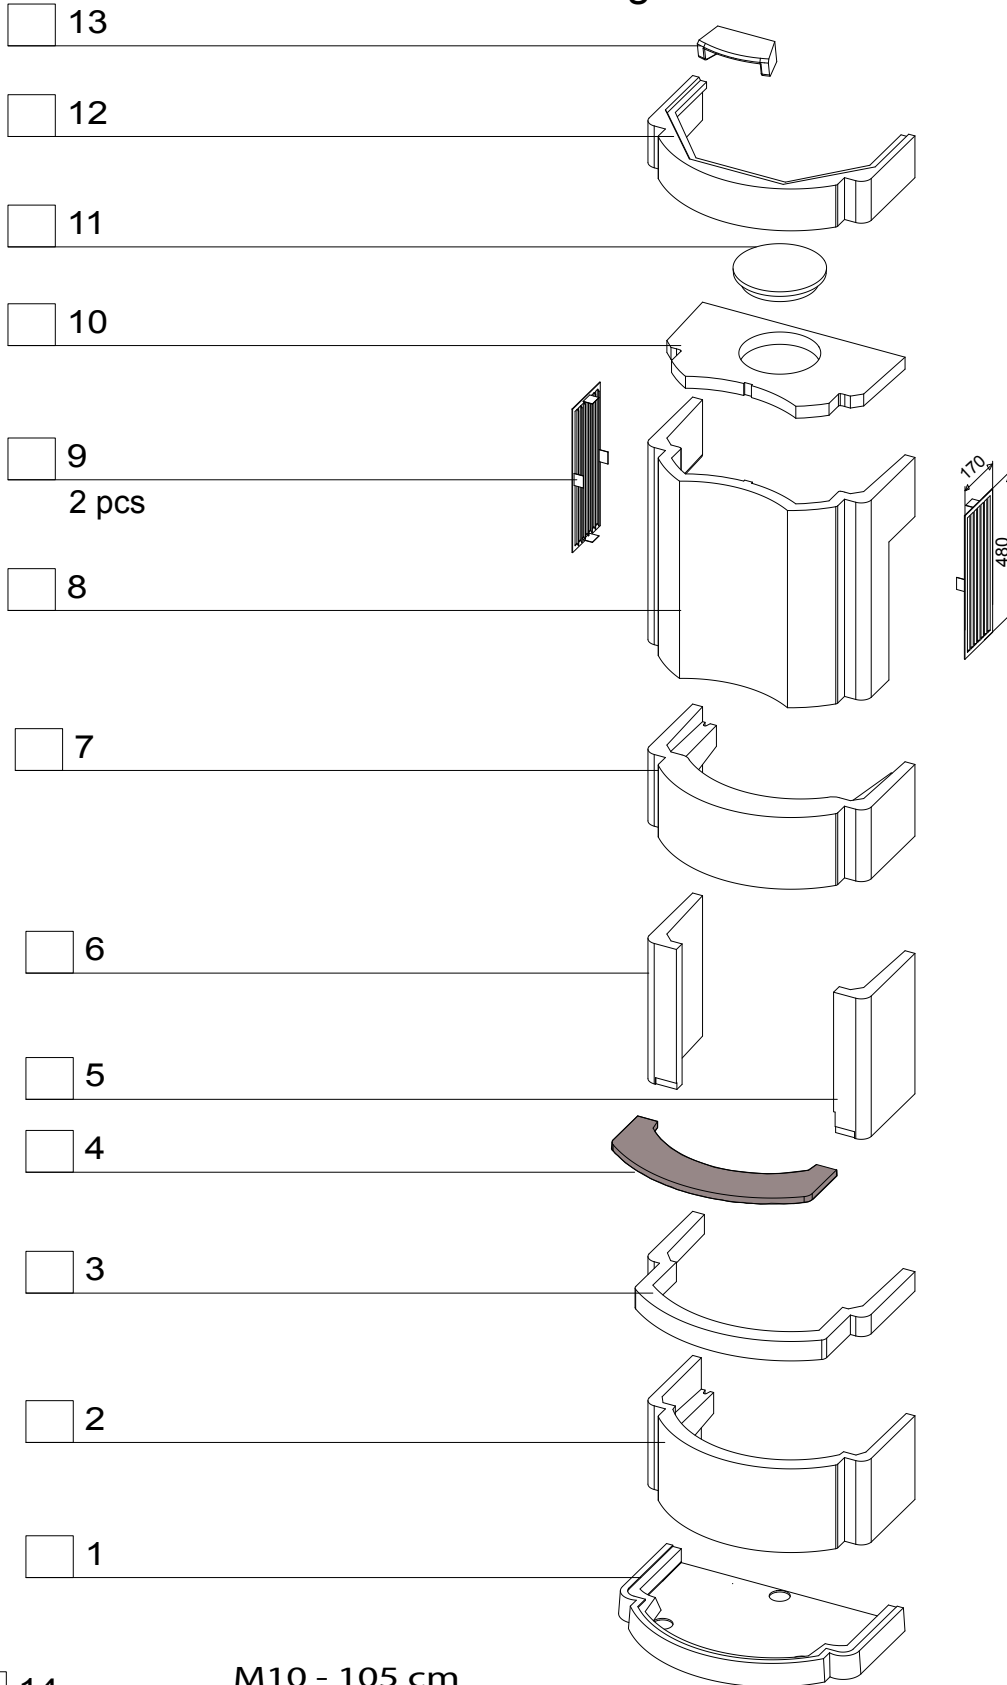

Installation manual

Glue

Acryl