


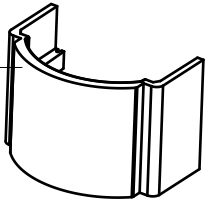
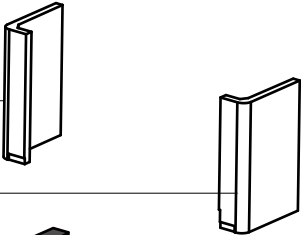
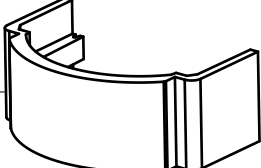

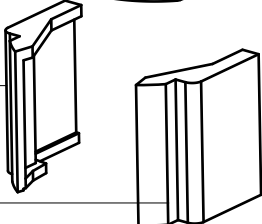
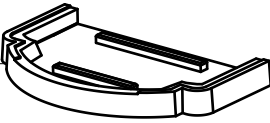



Verona Straight KJK FP-VER12-201

☐	22-00027-000	
☐	CO-VER01-009	
☐	CO-VER12-011	
☐	CO-VER01-005	
☐	CO-VER01-006	
☐	MB-VER00-201	
☐	CO-VER01-003	
☐	CO-VER12-006	
☐	CO-VER12-005	
☐	CO-VER12-003	
☐	CO-VER12-004	
☐	MO-VER12-201	
☐	CO-VER12-001	

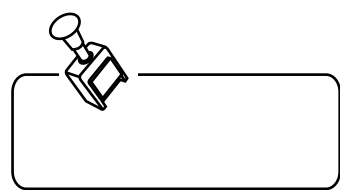


041209

Installation manual

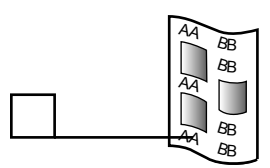


Glue

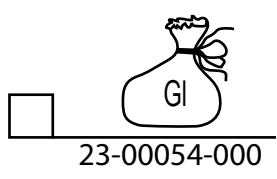


23-00054-000

Acryl

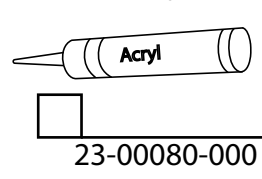

23-00080-000

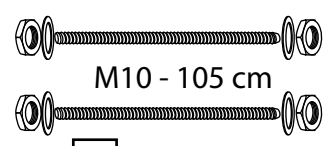

M10 - 105 cm

