
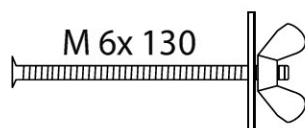



Valencia straight

Installation manual


☐ 94089

☐ 94068

☐ 94044 2 pcs

6 pcs


☐ 94128


Sideleg support antrasit


☐ 93170 2 pcs


MO-VAL01-301


☐ 93001

22-00027-000


☐ 93002

CO-VAL02-002

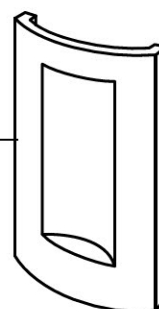
☐ 93003

CO-VAL01-003

Left



Right



800

☐ 93004

CO-VAL01-004

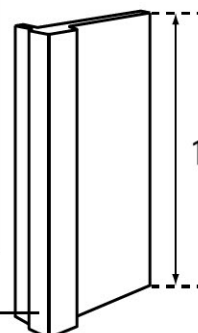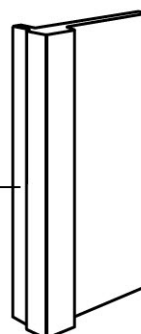

1130

☐ 93005

CO-VAL01-005

☐ 93005

CO-VAL01-006


☐ 93150


MB-VAL00-301

☐ 93007

CO-VAL01-007


☐ 93008

CO-VAL01-008

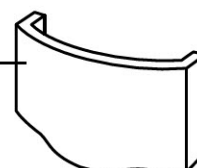
☐ 93009

CO-VAL01-009

